



NINJA CONTROL FLYING MIKEY


To change batteries:

- Unscrew battery cover.
- Take out old batteries and replace with 4 new AA batteries.
- Replace battery cover.

Batteries Regulations:

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Non-rechargeable batteries are not to be recharged.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.
- Batteries are to be removed from the toys when not in use.
- Batteries should only be replaced by an adult.
- Do not dispose of batteries in fire.
- Do not use rechargeable batteries.

Batteries are not included.

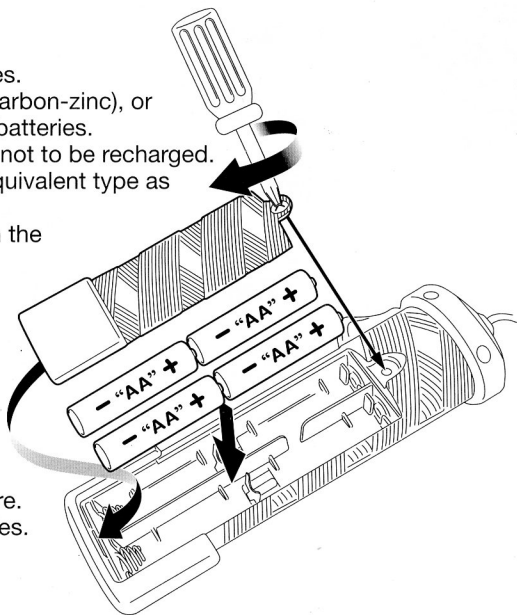


Assembly

Important – Propeller blades must be attached to the correct corresponding propeller shaft on the figure flight pack to work properly.

Carefully remove the propeller blades from the packaging, taking extra care not to bend the propellers. Look for the inscribed “R” or “L” on the bottom of each propeller to determine if you have the right or left propeller. Attach corresponding propeller blade to either the “right” or “left” propeller shaft on the figure’s flight pack by inserting the center tab on the propeller into the clip on the shaft* (see attached diagram). You should hear the propeller snap into place when connected. Repeat the same process with the 2nd propeller.


*Note that the right propeller attaches to the short shaft and the left propeller attaches to the long shaft on the back of the figure.

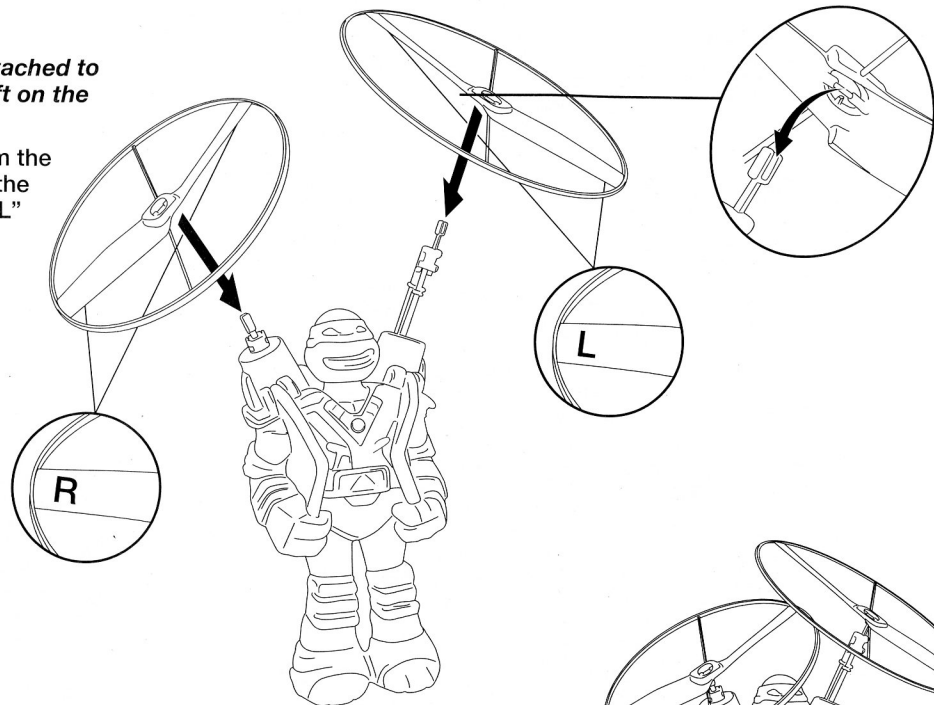

Flight Control

Make sure tether is not wrapped around the figure or the propellers. Hold fully assembled figure out in front of you about arm’s length. Begin pressing the controller trigger slowly at first and then increase the power by pushing the trigger in more until figure begins hovering on its own. Once the figure is hovering on its own you can control flight height by pushing in or letting off the trigger pressure. While hovering, you can now move slowly around with the figure by moving forward or backward. You can even turn by slowly pushing or pulling the controller in any direction. It will take some practice to master flight control completely.

For safety, do not fly figure near anyone’s face or hair.

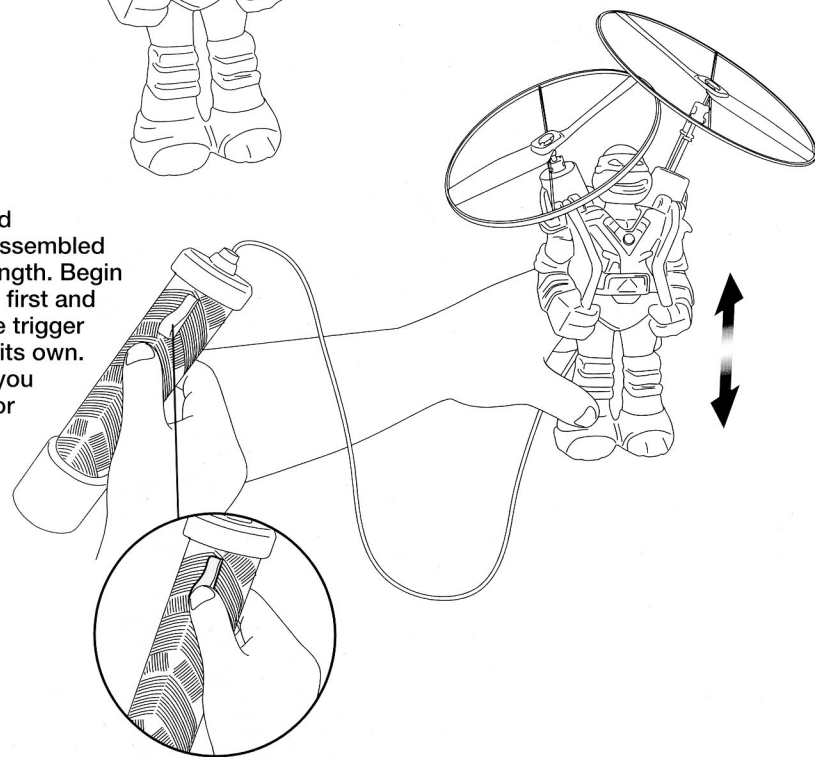

Although this product is recommended for indoor play, it can be flown outdoors as long as there is no precipitation of any kind and little to no breeze to affect flying performance. It is never recommended to use this product in extreme weather conditions or when temperatures are below 32°F/0°C or above 122°F/50°C.

Ages 4 and up
Asst. #91610
Item #91613



©2013 Viacom International Inc. All Rights Reserved. TEENAGE MUTANT NINJA TURTLES and all related titles, logos and characters are trademarks of Viacom International Inc. ©2013 Viacom Overseas Holdings C.V. All Rights Reserved. TEENAGE MUTANT NINJA TURTLES and all related titles, logos and characters are trademarks of Viacom Overseas Holdings C.V. ©2013 Playmates Toys Inc. Distributed by Playmates Toys Inc. 909 N. Sepulveda Blvd., Suite 800, El Segundo, CA 90245. PRINTED IN CHINA.

For more detailed instruction
information visit
www.Playmatestoy.com